

CONTROL PANEL

Selection window

Displays the selected function.

Auto button

Press to select one of the autofunctions:

Multifunction knob

Turn to select a desired function:

- Timer
- Microwaves
- Grill
- Turbo Grill
- Crisp
- Auto functions

Digital display

The display includes a 24-hour clock and indicator symbols.

Selector indicator lights

These indicators which selection you are currently working with.

Select button

Press to select setting:  
Weight  
Time  
Microwave power level

F

0 1:30

2 3 4 5 6 7 8 9

+/- knob  
Turn to set value of:  
Time  
Weight  
Doneness

Stop button.

Press shortly to stop or reset any of the oven functions.

Select

AUTO

Rapid Start button.

Use to start the cooking process or invoke the Rapid Start function.

CHOOSING MICROWAVE POWER

MICROWAVES ONLY

To be used for:

- Level** RAPID / 900 W Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.
- 750 W Cooking of vegetables, fish, meat etc.
- 650 W Cooking dishes, not possible to stir.
- 500 W More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
- 350 W Simmering stews, melting butter.
- 160 W \* Defrosting.
- 90 W Softening butter, cheese and ice cream.
- 0 W Setting the standing time.

MICROWAVES & GRILL / TURBO GRILL

To be used for:

- Level** 90 - 160 W Fish, fruit
- 160 - 350 W Vegetables, gratins

FORCED AIR

To be used for:

- Level** 90 - 160 W Roasts, cakes
- 160 - 350 W Lasagne, poultry

MANUAL DEFROSTING

 
This function is used for defrosting food not included in the Rapid defrost function.

Follow the procedure for "How to cook and reheat with microwaves" and choose 160 W when defrosting manually.

RAPID START FUNCTION

This function is used for quick reheating of food with a high water content such as; clear soups, coffee or tea.

Press to automatically start with full microwave power level and the cooking time set to 30 seconds. Each additional press increases the time with ½ min. You may also alter the time by turning the Adjust knob to increase or decrease the time. This button also works as a normal start button after setting a function.



AUTO

AUTO FUNCTIONS

QUICK GUIDE

1. Turn the multifunction knob to the Auto position.
2. Press the Auto button to select the desired auto function.
3. Turn the +/- knob to choose desired food class.
4. Press the Select button (default weight is displayed).
5. Turn the +/- knob to set the weight of the food.
6. Press the Start button.

Midway thru the process, the oven may STOP and prompt you to "TURN or STIR FOOD":

- Don't use the stop button!
- Just open the door and turn the food.
- Close, and restart with the Rapid Start button.

Automatic but less perfect results:

If you do not turn the food when the oven prompts you to do so, the oven will AUTOMATICALLY RESTART after 1 minute. The oven then completes the process. The time will be longer in this case and the result will be less perfect, than it would have been if you had turned the food when prompted to do so.

AUTO RAPID DEFROST

Use this function for defrosting ONLY. Rapid Defrost can only be used for very fast defrosting of frozen food belonging to the categories listed here. Use manual defrost for other food or weights not listed.

PLEASE NOTICE  
To achieve perfect results  
NECESSARY to:






- Input, with the max. possible precision, the WEIGHT of the food selected.
- Turn the food when the oven prompts you to do so.

				
1 MEAT (100 g - 2 Kg)	2 POULTRY (100 g - 3 Kg)	3 FISH (100 g - 2 Kg)	4 VEGETABLES (100 g - 2 Kg)	5 BREAD (100 g - 2 Kg)

AUTO AUTO REHEAT

Use this function when reheating readymade food or milk. Auto Reheat can be used for food belonging to the categories listed here.

PLEASE NOTICE  
During the heating process the oven may stop and prompt you to "STIR" food.

				
1 DINNER PLATE (250 g - 600 g)	2 SOUP (200 g - 800 g)	3 FROZEN PORTION (250 g - 600 g)	4 MILK (100 g - 500 g)	5 CASSEROLE (200 g - 800 g)

NOTE: Never operate the oven empty when using microwaves

AUTO

AUTO CRISP

Use this function to quickly reheat your food from frozen to serving temperature.

PLEASE NOTICE  
Auto Crisp is used only for frozen ready made food and fish fingers.

			
1 FRENCH FRIES (200 g - 600 g)	2 PIZZA, thin crust (200 g - 500 g)	3 PAN PIZZA (300 g - 800 g)	4 CHICKEN WINGS (200 g - 600 g)
			5 FISH FINGERS (200 g - 600 g)

AUTO

AUTO FA COMBI

Use this function for cooking from raw or frozen. Auto Cook can only be used for food belonging to the categories listed here. Use "Forced air or Forced air & microwaves" for other food or weights not listed.

PLEASE NOTICE  
After the PRE-HEATING process the oven will stop and prompt you to "ADD" food.

				
1 CHICKEN (800 g - 1½ Kg)	2 FROZEN LASAGNE (400 g - 1 Kg)	3 COOKIES	4 CANNED BREAD DOUGH	5 FROZEN ROLLS

TECHNICAL SPECIFICATION

Supply voltage	230 V/50 Hz
Rated Power Input	3000 W
Fuse	16 A (UK 13 A)
MW output power	900 W
Grill	1600 W
FA	1450 W
	H x W x D
Outer dimensions:	455 x 595 x 560
Oven compartment:	210 x 450 x 420

GRILL

Use this function when cooking:

- Cheese toast & Hot sandwich
- Sausages
- Grill spit
- Pommes Duchesse
- Gratinated fruit

TURBO GRILL

Use this function when cooking:

- Potato gratin
- Fish gratin
- Chicken pieces
- Lasagne
- Stuffed vegetables



4619 694 45272